




**RICAMBI CONSIGLIATI PER LE PRIME 2000 h serie TNV**

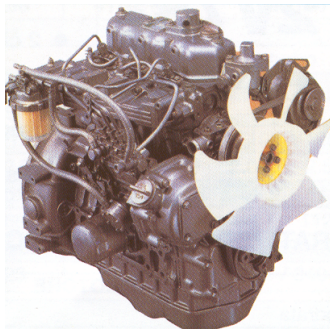

<b>Modello motore: 3TNV 88-DCR</b>	<b>Codice Particolare</b>	<b>Qt</b>	<b>Prezzo Unitario</b>
Filtro Olio	129150-35153	9	8,83
Filtro Gasolio Primario	119802-55801	4	9,90
Separatore acqua (cartuccia-loose parts)	119802-55710	4	8,41
Cinghia pompa acqua	25132-003600	1	15,11
Filtro aria	Non presente	8	0
Guarnizione Coperchio Valvole	129004-11310	2	27,13
Polverizzatore	129004-53001	6	85,24

**Sostituzioni periodiche dei ricambi sopra elencati.**

- Filtro Olio: la prima volta a 50 ore, successivamente ogni 250 ore.  
( queste sostituzioni sono unitamente a quelle dell'olio motore )
- Filtro gasolio primario / Filtro gasolio secondario: ogni 500 ore  
( la periodicità della sostituzione di questi filtri è subordinata alla qualità del gasolio utilizzato )
- Guarnizione coperchio valvole: ogni 1000 ore  
( sostituire ad ogni operazione di registrazione valvole )
- Polverizzatori: ogni 1000 ore ( in condizioni di lavoro normali )

**Per ulteriori dettagli visionare la tabella allegata**

# PERIODIC MAINTENANCE

# Periodic Maintenance Schedule

○:Check ◇:Replace ●: Contact your authorized Yanmar industrial engine dealer or distributor

System	Check Item	Daily	Periodic Maintenance Interval					
			Every 50 hours	Every 250 hours	Every 500 hours	Every 1000 hours	Every 1500 hours	Every 2000 hours
Cooling System	Check and Refill Engine Coolant	○						
	Check and Clean Radiator Fins			○				
	Check and Adjust Cooling Fan V-Belt		○ 1st time	○ 2nd and after				
	Drain, Flush and Refill Cooling System with New Coolant					◇ or every year whichever comes first		
Cylinder Head	Adjust Intake / Exhaust Valve Clearance					●		
	Lap Intake / Exhaust Valve Seats							●
Electrical Equipment	Check Indicators	○						
	Check Battery		○					
Engine Oil	Check Engine Oil Level	○						
	Drain and Fill Engine Oil			◇				
	Replace Engine Oil Filter		◇ 1st time	◇ 2nd and after				
Engine Speed Control	Check and Adjust Governor Lever and Engine Speed Control	○		○				
Emission Control Warranty	Inspect, Clean and Test Fuel Injectors						●	
	Inspect Turbocharger (Blower wash as necessary) 3TNV64T, 4TNV64T, 4TNV96T, and 4TNV106T						●	
	Inspect Crankcase Breather System						●	
Fuel	Check and Refill Fuel Tank Level	○						
	Drain Fuel Tank			○				
	Drain Fuel Filter / Water Separator		○					
	Check Fuel Filter / Water Separator	○						
	Clean Fuel Filter / Water Separator				○			
	Replace Fuel Filter				◇			
Hoses	Replace Fuel System and Cooling System Hoses							● or every 2 years
Intake and Exhaust	Clean or Replace Air Cleaner Element			○	◇			
Complete Engine	Overall Visual Check Daily	○						

Note: These procedures are considered normal maintenance and are performed at the owner's expense.